

# IDO<sup>®</sup>



**HAND MIXER**

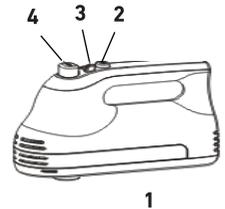

**HM500-BK**

**INSTRUCTIONS MANUAL**

THANK YOU FOR CHOOSING IDO PRODUCTS

**COMPONENTS****HAND MIXER**

1. Body
2. Turbo button
3. Speed button
4. Eject button
5. Dough Hooks
6. Whisks Hooks

**SAFETY INSTRUCTIONS**

PLEASE CAREFULLY READ THE INSTRUCTIONS BEFORE USING YOUR APPLIANCE

1. Please keep your instructions manual, the warranty certificate and purchase voucher.
2. Check that electrical installation is in conformity with currently Applicable Standards, compatible with the power and the voltage indicated underneath your appliance. If this is not the case, don't use the appliance.
3. The appliance is made for household use only.
4. If there are any defects in the appliance or its cord cease its use immediately and contact the nearest service centers of **Anasia**.
5. Any intervention other than cleaning, such as normal maintenance must be carried out by an approved **Anasia** service center.
6. Never put the appliance or its cord or the plug into water or any other liquid.
7. Unplug the appliance as soon as you stop using it, before assembly, disassembly and during the cleaning process.
8. For your own safety, only use original parts and accessories designed for your appliance.
9. Don't touch any rotating or moving parts while still in motion; always wait for them to stop.
10. Keep the appliance and its cord out of reach of children.
11. The blades are very sharp, take care while handling them, while emptying the bowl or during the cleaning.

**BEFORE FIRST USE**

- Remove all packaging material before using your appliance for the first time and read the operation instructions.
- Wipe the body with a damp cloth and dry it well.
- The hand mixer can be washed with warm soapy water, rinse after cleaning and dry thoroughly with a soft dry cloth.

## USING YOUR APPLIANCE

- Prepare the ingredients to be whisked in a suitable bowl.
- Install the required tools by hand by inserting each tool into the slot designated for it at body (1) and pressing it until it is fixed well.
- Connect the appliance to a suitable electrical source.
- Set the desired speed from (1:5) from the Speed button (3) and you can press the turbo button (2) to beat with full force.
- After you finish mixing, return the speed button to the position (0).
- Disconnect the appliance from the main outlet.
- Then click on the Eject button (4)

## PRODUCING GUIDE

Please note that this is the recommended usage for the stand and mixing bowl. If using the mixer by hand, the speed you select may depend upon the bowl size (if not using the bowl supplied, quantities, the ingredients you are mixing and personal preference) gradually increase to the recommended speed below.

 <b>WHISKS</b>			
FOOD TYPE	MAXIMUM CAPACITY	SPEED	TIME (Approximate)
Egg whites	6	4 - 5	2 - 4 minutes
Cream	300ml	1 - 5	4 minutes
All-in-one cake mixes	400g	1 - 5	1½ - 2 minutes
Batter	400ml	4 - 5	1 minute
 <b>DOUGH HOOK</b>			
Bread	350g	1 - 5	2 - 3 minutes
Batter	400ml	4 - 5	1 minutes
Mix muffins	350g	4 - 5	1 minutes
Blend butter & sugar		4 - 5	1 minutes

## CLEANING AND MAINTENANCE

- Remove the plug from the wall socket.
- Clean the body of the mixer with a damp cloth after use.
- Wash the hand mixer with water and washing liquid.
- Dry the attachments with a dry cloth and store.

## TECHNICAL SPECIFICATION

POWER	VOLT	FREQUENCY
500 W	220-240 V	50-60 HZ

## TROUBLE SHOOTING

What to do if your appliance doesn't work?

Check

- It is correctly plugged in the wall socket.
- The attachments are inserted correctly.

If your appliance is still not working, contact **Anasia** customer service.

**MANUFACTURED ACCORDING TO THE  
EGYPTIAN STANDARD NO. 1590/2010**

**MADE IN EGYPT FOR ANASIA EGYPT  
FOR TRADE**

## استكشاف الاخطاء واصلاحها

إذا كان جهازك لا يعمل، تأكد من أن

- تم توصيل الجهاز بالتيار الكهربائي .
- تم تركيب الملحقات بشكل صحيح .

إذا استمر جهازك لا يعمل ، يرجى الاتصال  
بخدمة عملاء **أنسيا** .

## صنع طبقا للمواصفات القياسية المصرية

رقم 1590/2010

صنع في مصر لصالح شركة أنسيا مصر للتجارة

## التنظيف والصيانة

- افصل الجهاز عن الكهرباء.
- نظف جسم الجهاز بقطعة قماش رطبة بعد كل استخدام .
- اغسل مضرب بيض بالماء الدافئ وقليل من سائل التنظيف .
- تجفيف الملحقات بقطعة قماش جافة وتحفظ .

## الخصائص الفنية

القدرة	فولت	تردد
0.0 واط	٢٢٠-٢٤٠ فولت	٦٠-٥٠ هرتز

## استخدام الجهاز

- قم بتجهيز المكونات المراد خفقتها في وعاء مناسب .
- ثبت الأدوات المطلوبة باليد من خلال إدخال كل أداة في الفتحة المخصصة له بالجسم (1) وألضغط عليه حتي يثبت جيدا .
- صل الجهاز بمصدر كهربائي مناسب .
- قم بضبط السرعة المطلوبة من (0 :1) من زر السرعات (٣) ويمكنك بالضغط على زر التبرو (٢) الخفق بالقوة الكاملة .
- بعد الانتهاء من الخفق قم بإعادة زر السرعات إلى الوضع (٠) .
- افصل الجهاز عن التيار الكهربائي .
- ثم قم بالضغط على زر اخراج الادوات (٤) .

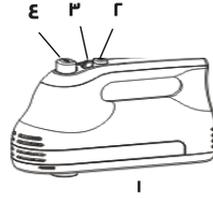
## السرعات الموصى بها للمضارب وأدوات العجين

يرجى ملاحظة ان هذه التوصيات في حاله استخدام وعاء الخلط المرفق مع الحامل اما اذا كنت تستخدم المضرب يدويا فقد تعتمد السرعة المحددة على حجم الوعاء المستخدم (في حالة عدم استخدام الوعاء المزود والكميات والمكونات التي تستخدمها زد تدريجيا إلى السرعات الموصى بها ادناه) .

ادوات الخفق 			
نوع الطعام	اقصى كمية	السرعة المقترحة	الوقت التقريبي
بياض البيض	٦	0-٤	٢-٤ دقائق
كريمة	٣٠٠ جرام	0-1	٤ دقائق
خليط الكيك الكل في واحد	٤٠٠ جرام	0-1	١,٥-٢ دقائق
خليط	٤٠٠ جرام	0-٤	١ دقيقة
ادوات العجين 			
خبز	٣٥٠ جرام	0-1	٢-٤ دقائق
خليط	٤٠٠ مل	0-٤	١ دقيقة
ميكس مافن اخطي الزبدة والسكر	٣٥٠ جرام	0-٤ 0-٤	١ دقيقة ١ دقيقة

## أجزاء الجهاز

### مضرب البيض



١. الجسم

٢. زر التربو

٣. زر التحكم في السرعة

٤. زر اخراج الادوات من الموتور

٥. أدوات العجين

٦. أدوات الخفق

## تعليمات السلامة

برجاء قراءة التعليمات بعناية قبل الاستخدام لأول مرة

### قبل الاستخدام لأول مره

- قبل استخدام الجهاز لأول مرة ينبغي التأكد من إزالة كافة مواد التغليف وقراءة تعليمات التشغيل .
- امسح جسم الموتور بقطعة قماش مبللة وجففها جيدا .
- يمكن غسل مضرب بيض بالماء الدافئ المحتوى على صابون قم بالاشطف بعد التنظيف وقم بالتجفيف جيدا باستخدام قطعة قماش ناعمة جافة .

١. برجاء الاحتفاظ بكتيب التعليمات ، شهادة الضمان و قسيمة الشراء .
٢. تأكد ان قوة التيار الكهربائى الخاص بالجهاز متطابقة مع قوة التيار الكهربائى للمنزل .
٣. صمم هذا الجهاز للاستخدام المنزلى فقط .
٤. لا تستخدم الجهاز اذا كان به تلف او لا يعمل بشكل صحيح في مثل هذه الحالة اتصل بمركز خدمة معتمد من قبل أنسيا .
٥. اى تدخل في الجهاز غير التنظيف يجب ان يتم من خلال مركز خدمة معتمد من أنسيا .
٦. لا تغمر الجهاز او الوصلة الكهربائيه في الماء او اى سوائل اخرى ولا تستخدم الجهاز بأيدي مبللة .
٧. افصل الجهاز دائما عن التيار بعد الانتهاء من استعماله و قبل الفك والتركيب او قبل تنظيفه .
٨. لسلامتك الشخصية استخدم فقط قطع الغيار والملحقات الاصلية المناسبة لجهازك .
٩. يجب عدم لمس الشفرات الحادة اثناء التشغيل كما يجب الانتظار حتي يتوقف الجهاز تماما .
١٠. يجب ابقاء الجهاز وكابيل الطاقة بعيدا عن متناول الاطفال .
١١. يرجى توخى الحذر عند التعامل مع شفرات القطع الحاده ، خاصة عند تنظيف او تفريغ الوعاء .

## WAYS TO ACTIVATE YOUR WARRANTY ( 2 YEARS WARRANTY)

1. Scan the QR code at the bottom on the page.
- OR
2. Visit our website [www.anasiashop.com](http://www.anasiashop.com)
- OR
3. Through our mobile application.

## MAINTENANCE & CUSTOMER SERVICES

### ANASIA, CAIRO

9, Mostafa Refaat St. Sheraton  
Heliopolis, Cairo

### ANASIA, ALEX

23, Essam Helmy El-Masry St. off Admon  
Fremon St. Semouha, Alexandria

### ANASIA, MANSOURA, DELTA

2, Ibrahim Shalaby St. off Samia El-Gamal  
St. Mansoura

## CUSTOMER SERVICE

(02) 22684159

## طرق تفعيل الضمان (سنتين ضمان)

١. امسح رمز QR كود في اسفل الصفحة.  
أو
٢. قم بزيارة موقعنا الإلكتروني [www.anasiashop.com](http://www.anasiashop.com)  
أو
٣. من خلال تطبيق الموبيل.

## مركز الصيانة وخدمة العملاء

### شركة أنسيا فرع القاهرة

٩ شارع مصطفى رفعت  
مساكن شيراتون، القاهرة

### شركة أنسيا فرع الأسكندرية

٢٣ شارع عصام حلمي المصري  
متفرع من آدمون فريمون سموحة، الأسكندرية

### شركة أنسيا فرع المنصورة، الدلتا

٢ شارع إبراهيم شلبي  
متفرع من سامية الجمل، المنصورة

## خدمة العملاء

(٠٢) ٢٢٦ ٨٤١٥٩



HOTLINE  
الخط الساخن



DOWNLOAD ANASIA SHOP APP

